




## Cordless Reciprocating Saw

Item No : DRS-102



● The consumable parts    ▲ The replacement parts    ★ The non-replacement parts

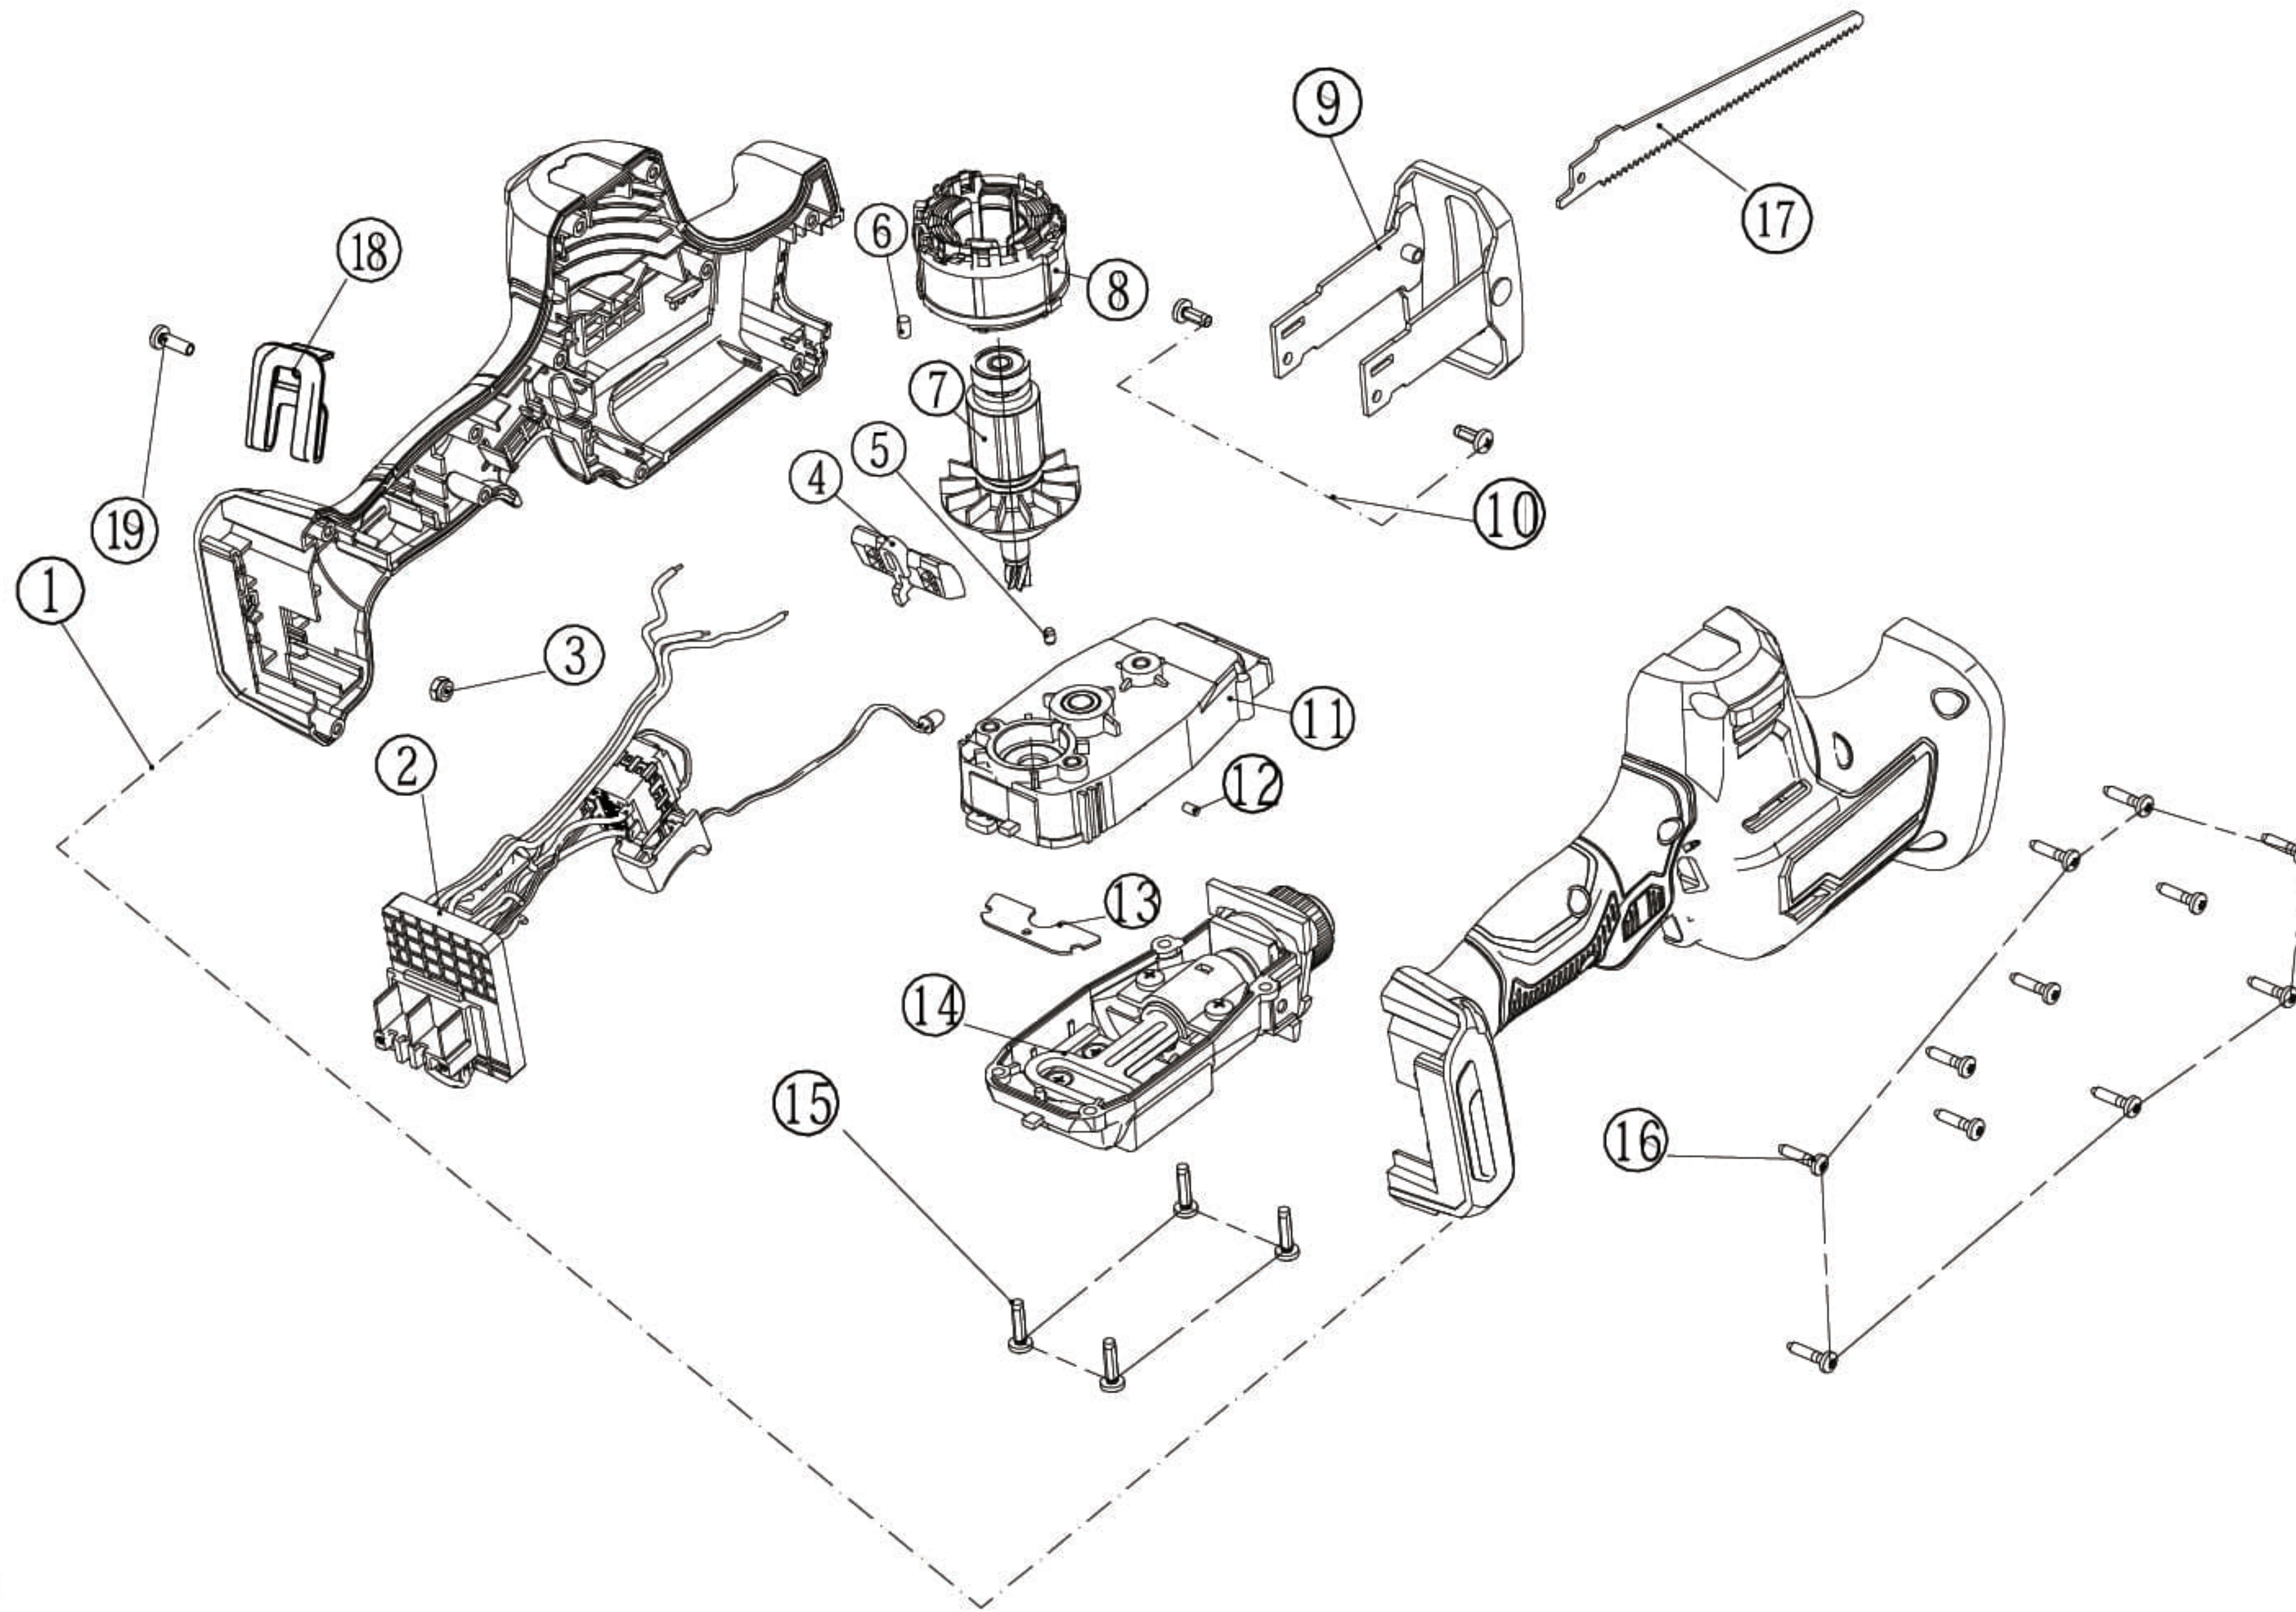

## Part List DRS-102

|   | NO. | INDEX NO.  | DESCRIPTION                    | Q'TY  |
|---|-----|------------|--------------------------------|-------|
| ★ | 1   | DRS-102K01 | L R Housing Set                | 1 SET |
| ▲ | 2   | DRS-102P02 | Main Electric Assembly         | 1     |
| ★ | 3   | DRS-102P03 | Nut                            | 1     |
| ★ | 4   | DRS-102P04 | Lock Button                    | 1     |
| ★ | 5   | DRS-102P05 | Rubber Pole                    | 1     |
| ★ | 6   | DRS-102P06 | Rubber Stick                   | 1     |
| ★ | 7   | DRS-102P07 | Rotor                          | 1     |
| ★ | 8   | DRS-102P08 | Stator                         | 1     |
| ▲ | 9   | DRS-102P09 | Pivot Shoe                     | 1     |
| ★ | 10  | DRS-102T10 | Thread Forming Screw (2 pcs)   | 1 SET |
| ▲ | 11  | DRS-102P11 | Gear Case ASSY                 | 1     |
| ★ | 12  | DRS-102P12 | Lock Pin                       | 1     |
| ★ | 13  | DRS-102P13 | Support Plate                  | 1     |
| ▲ | 14  | DRS-102P14 | Gear Case Cover ASSY           | 1     |
| ★ | 15  | DRS-102T15 | Thread Forming Screw (4 pcs)   | 1 SET |
| ★ | 16  | DRS-102T16 | Hexagon Lobular Screw (11 pcs) | 1 SET |
| ● | 17  | DRS-102P17 | Reciprocatingsaw Blade         | 1     |
| ★ | 18  | DRS-102P18 | Hook                           | 1     |
| ★ | 19  | DRS-102P19 | Screw                          | 1     |